

# GRACO®

 
## Stroller

### OWNER'S MANUAL

Model No. \_\_\_\_\_  
Serial No. \_\_\_\_\_

Dear Customer,

Please fill in  
the model and  
serial numbers  
above from the  
label on the rear  
leg of your new  
stroller.

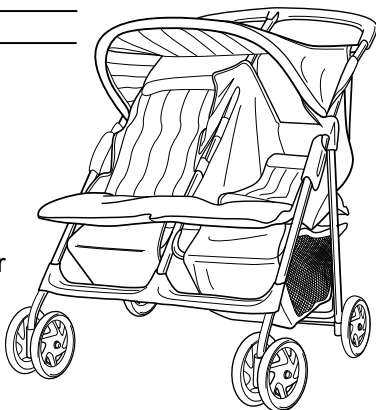

**Model No. 6500 Series**

### Congratulations on your purchase of a Graco® stroller!

Graco is a world leader in strollers and has helped thousands of parents transport their children in comfort. We believe your new Graco® stroller is a wise choice, promising many hours of enjoyment for your baby.

 
Before using your stroller, please take a few minutes to read this Owner's Manual. The short time you spend reading these instructions will help you assemble and use your stroller properly.

**Please save your Owner's Manual  
for future use.**


### Customer Satisfaction

Our goal is to make every product the best it can be! We are also committed to supporting our products after purchase. If you would like to speak to Graco about your product, please contact our **Customer Service Department at 1-800-345-4109** or visit our Internet website, [www.gracobaby.com](http://www.gracobaby.com). Our knowledgeable staff will be ready to answer any questions you may have concerning parts, use or maintenance. When you call, please have the **model and serial numbers** ready so your call may be processed quickly and efficiently.


## ⚠ WARNING

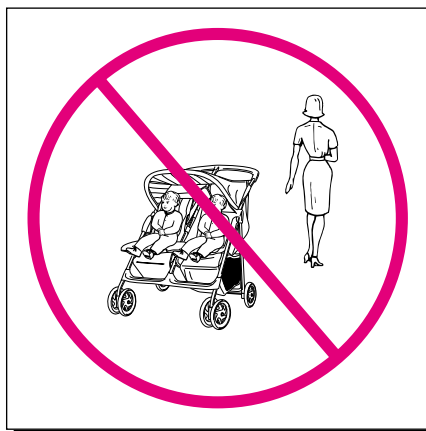

 
Never leave child unattended.  
Always keep your child in view.

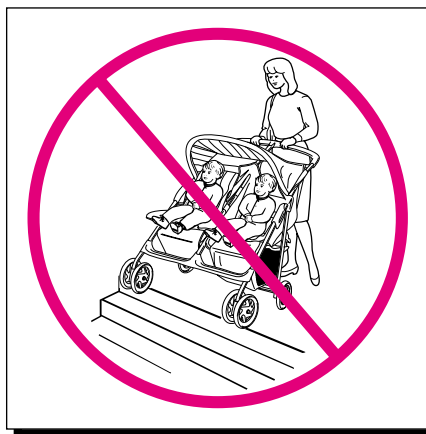

 Never use stroller on stairs or escalators. You may suddenly lose control of the stroller or your child may fall out. Also, use extra care when going up or down a step or curb.

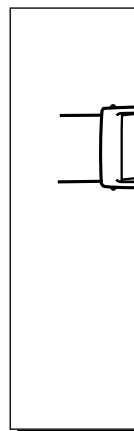

Avoid seat sliding out.

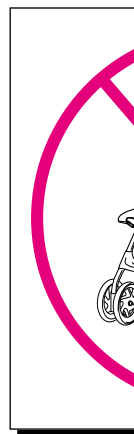 

Use of the stroller on uneven surfaces weighing a child over 36.2 kg (80 lb) will cause stress on the stroller and child in either seat or bassinet (18.1 kg).

**TO PREVENT INJURY TO CHILD**  
(4.5 kg)

**DO NOT**  
cause injury


**AVOID**  
neck, spine

**NEVER**

 
**STROLLER**  
while jogging

**DISCONNECT**


**Failure to follow these warnings and the assembly instructions could result in serious injury or death.**

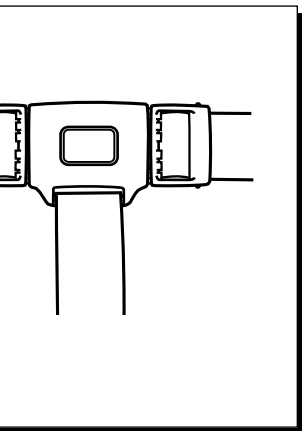

 
ious injury from falling or  
t. Always use seat belt.

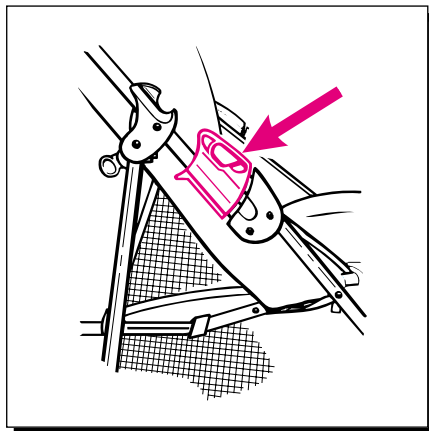

 
Be certain the stroller is fully erected  
and latched before allowing your child  
near the stroller.

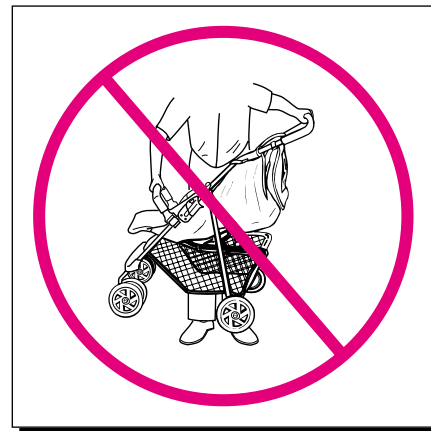

 **DO NOT** lift the stroller by the  
arm bar or child's tray.

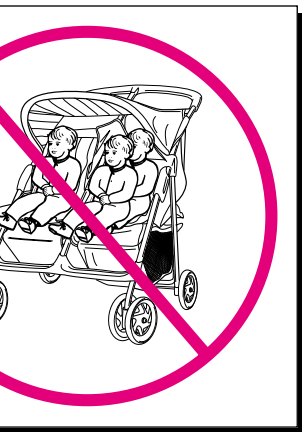

 stroller with two children  
total of more than 80 lbs.  
will cause excessive wear  
on the stroller. The weight  
at should not exceed 40 lbs.

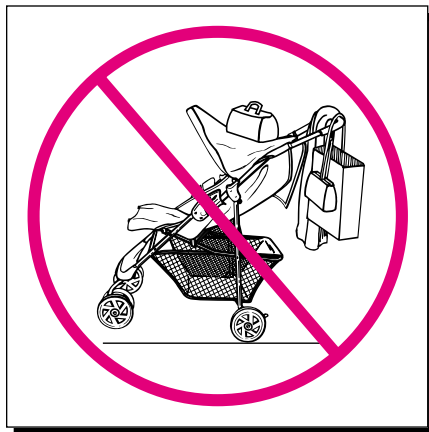

**DO NOT** place purses, shopping  
bags, parcels and accessory items  
on handle or canopy. They may fall  
on the child or change the balance  
of the stroller and make it unstable.



**Never** place child in the stroller with  
head toward front of the stroller.

**EVENT A HAZARDOUS CONDITION**, do not place more than 10 lbs.  
) in the storage basket. **DO NOT** use storage basket as a child carrier.

**DO NOT ALLOW YOUR CHILD** to stand on the basket. It may collapse and  
injury.

**STRANGULATION.** **DO NOT** place items with a string around your child's  
suspend strings from this product, or attach strings to toys.

**DO NOT ALLOW YOUR STROLLER** to be used as a toy.

**STROLLER TO BE USED** only at walking speed. Product not intended for use  
ogging, skating, etc.

**DO NOT CONTINUE USING YOUR STROLLER** should it become damaged or broken.


**FOR ADDITIONAL IMPORTANT  
INFORMATION**, please see the  
Helpful Hints and Care and  
Maintenance sections in these  
instructions.

## PARTS LIST

 CHECK that you have all the parts listed below  
BEFORE assembling your stroller.


If any parts are missing,  
call Customer Service at 1-800-345-4109  
or visit our Internet website, [www.gracobaby.com](http://www.gracobaby.com).

THIS PRODUCT REQUIRES ADULT ASSEMBLY.  
No tools required for assembly.

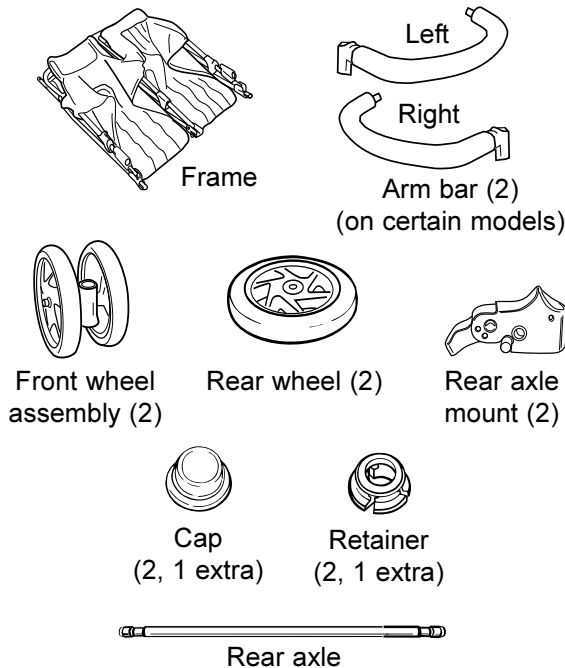

## To Unpack Stroller

 **⚠ WARNING** To prevent serious injury or death from choking, remove and **IMMEDIATELY** discard the plastic covers on the front leg pins.

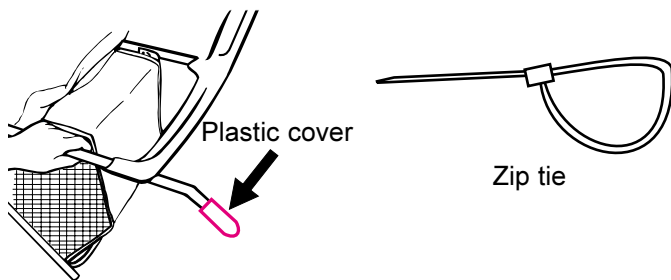


### Step 1.

Flatten stroller carton to protect floor.


### Step 2.

 Release storage latch.

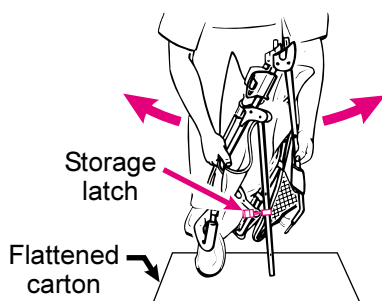

### Step 3.

 
Open stroller on carton until locking latches on both sides are locked.

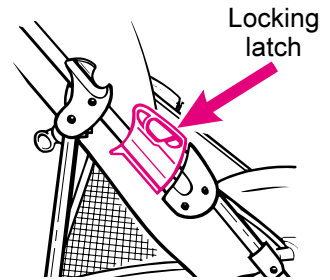

## To Assemble Front Wheels

### Step 1.

 Line up pin on bottom of front leg with the wheel assembly as shown. **Plastic snap inside wheel mount must be away from pin.**

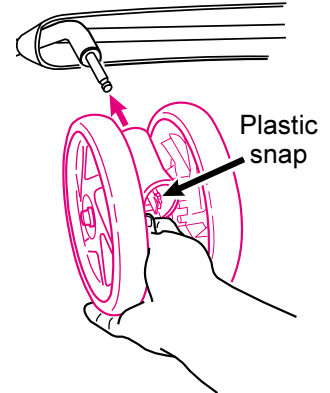

### Step 2.

Push wheel assembly onto pin until it snaps in place.

### Step 3.

 
Repeat for other wheel.

**Pull firmly on each wheel assembly to be sure the wheel assemblies are securely attached.**

## To Assemble Rear Axle

### Step 1.

Turn stroller over and position rear axle mounts on rear legs as shown. Brake levers must face rear of stroller. Push axle mounts on until plastic tabs snap into the slots on the legs.

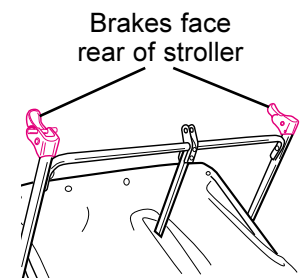


### Step 2.

**CHECK** that axle mounts are securely attached by pulling firmly on each axle mount.

**⚠ WARNING** To prevent serious injury or death from choking, remove and **IMMEDIATELY** discard the plastic covers on the ends of the rear axle.



### Step 3.

 Put the axle through both axle mounts and the center support as shown.

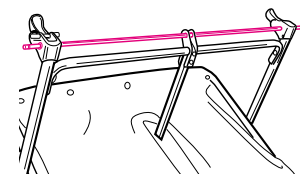

## To Assemble Rear Wheels

  Place parts on rear axle **in order** as shown. Push red retainer onto axle **BEFORE** attaching white cap.

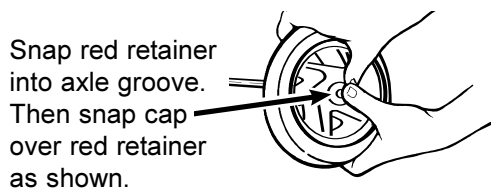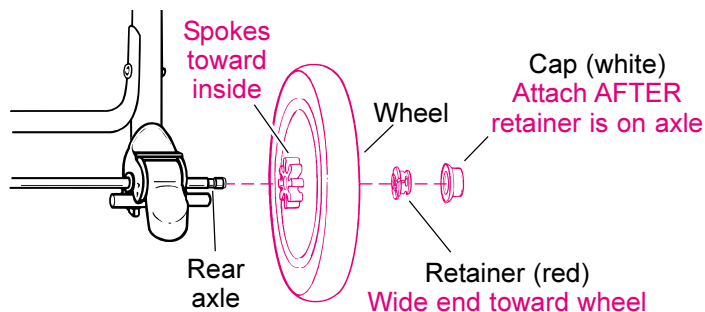


**Be sure cap is snapped securely over red retainer.**

## To Unfold Stroller

### Step 1.

 Release storage latch and begin opening stroller.

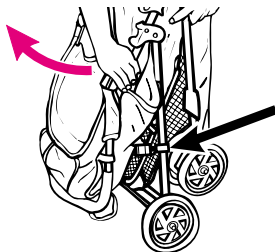

### Step 2.

 
Continue unfolding until both latches lock.




## To Use Brakes

**⚠ WARNING** Always apply both brakes when parking stroller.

Push **DOWN** to park.

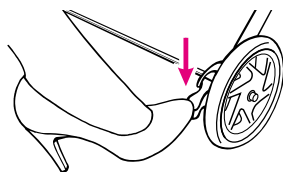


Lift **UP** to stroll.

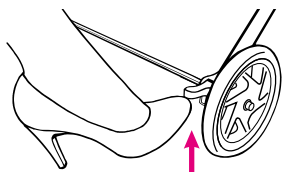 

## To Adjust Canopy

 Push or pull canopy to desired position.

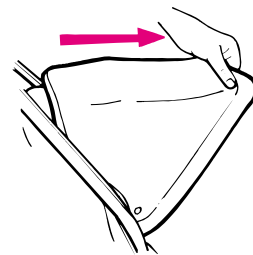

## To Secure Your Child

 
**⚠ WARNING** Avoid serious injury from falling or sliding out. Always use seat belt.

Your stroller will have **either** a three-point buckle or a double buckle waist belt. Follow the appropriate instructions below.

### Three-Point Buckle Waist Belt:


#### Step 1.

Place crotch strap between child's legs and snap both side buckles to the center buckle. Adjust belt as needed to get a snug fit around your child.

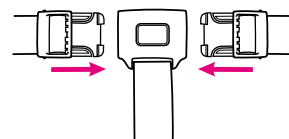

#### Step 2.

 
Push in on front of buckle to release.

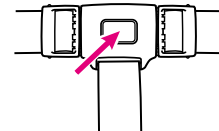

### Double Buckle Waist Belt:


#### Step 1.

 Place crotch strap between legs and fasten both belt buckles together. Adjust belt at both buckles as needed to get a snug fit around your child.

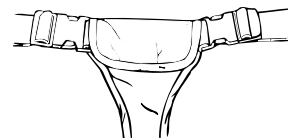

#### Step 2.

 Squeeze sides of buckles to release.

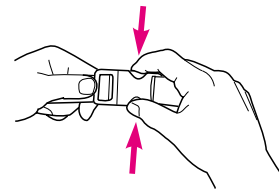

## To Fold Stroller

 
Before folding, fold canopy.

### Step 1.

Fully recline the seat back.


### Step 2.

Pull latches up to release and fold handle down.

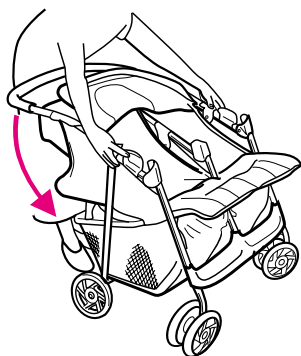


### OR

 On certain models, pull red latches on handle up to release. Fold handle down.

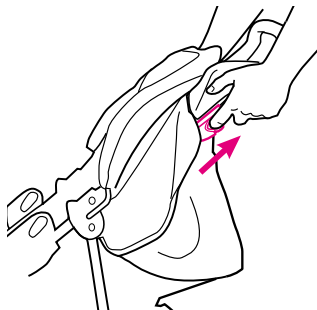

### Step 3.

 Close and lock storage latch.

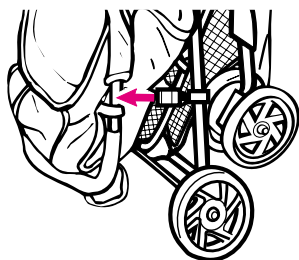


The following optional features are found only on certain models:

## To Adjust Seat Backs\*
 
### Step 1.

To recline the seat, push the two latches behind the seat toward each other.

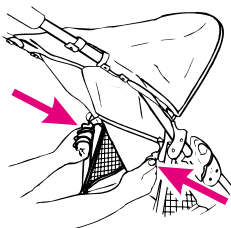

### Step 2.

To adjust seat to upright position, lift the seat back until both recline latches are locked.



**▲ WARNING** Fabric caught in the latches may prevent them from locking. When returning seat to upright position, do not allow fabric to be pinched in the latches.

\* On certain models

## To Use Arm Bars\*

**▲ WARNING** Always secure your child with the seat belt. The arm bars are not restraint devices.

**DO NOT** lift the stroller by the arm bars.

Use care when clamping the arm bars on the stroller with a child in the stroller.

"Left" and "right" arm bars are as caregiver would see them from front of stroller.

### Step 1.

 
Snap arm bars onto sides of front legs as shown below. The brackets must be attached with curved side up.

### Step 2.

To close the arm bars, face the stroller. Push the free end of the **left** arm bar into the **upper** hole in the center mount of the stroller. Push the free end of the **right** arm bar into the **lower** hole of the center mount. **CHECK** that arm bars are secure by pulling on them.

### Step 3.

To open arm bars, squeeze the metal buttons near the free end of each arm bar to unlock them. Buttons may be hidden under the arm bar pad.

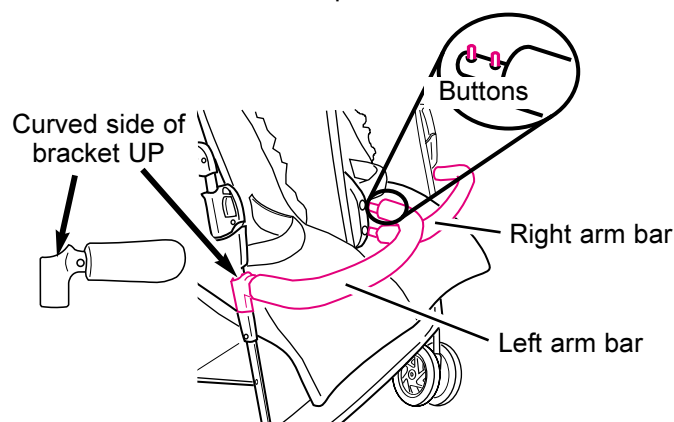

## To Change to Swivel or Non-swivel Wheels\*

Front swivel wheels lock for use on uneven surfaces such as grass, stones or gravel.

Before locking swivels, first push stroller forward a few feet to ensure the wheels are correctly positioned.

 


Push buttons up or down, depending on model, to lock or release swivels. Turn swivel to check that it is locked or released.



## HELPFUL HINTS

**IF WHEEL SQUEAKS**, use a light oil (e.g., WD-40, 3-in-1, or sewing machine oil). It is important to get the oil into the axle and wheel assembly as illustrated.

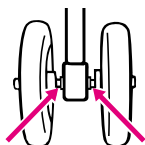


**WHEN USING YOUR STROLLER AT THE BEACH**, completely clean your stroller afterward to remove sand and salt from mechanisms and wheel assemblies.

**TO STAND FOLDED STROLLER**, lock the brakes.

## CARE AND MAINTENANCE

 **TO CLEAN THE SEATS** on models with side latches, unscrew the plastic clasps under the seats and the two release latches on the handle. (When removing latches, note location of the long screw and the wire attachment holes.) Hand wash in warm water with a mild detergent. Drip dry only—seats contain plastic inserts. Replace seats on frame when dry. Reattach wires to latches, then screw latches and clasps back onto stroller frame.

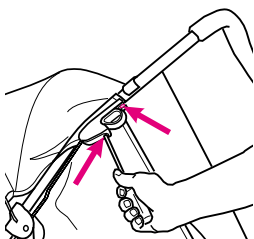

**REMOVABLE SEAT PADS** (if so equipped) may be machine washed in lukewarm water on delicate cycle and drip-dried. **NO BLEACH.**

**FROM TIME TO TIME CHECK YOUR STROLLER** for loose screws, worn parts, torn material or stitching. Replace or repair the parts as needed. Use only Graco® replacement parts.

**TO CLEAN STROLLER FRAME**, use only household soap or detergent and warm water. **NO BLEACH.**

**EXCESSIVE EXPOSURE TO SUN OR HEAT** could cause fading or warping of parts.

## Replacement Parts

### Instructions for ordering stroller parts:

Complete form below. Your stroller model number **MUST** be included on the form to ensure proper replacement parts. **Your model number can be found on a sticker on the rear leg of your stroller. Payment must accompany your order.**

Parts List:	Price:**
Seat .....	\$20.00
Canopy .....	\$18.00
Front wheel assembly .....	\$16.00
(2 wheels per unit)	
Rear axle .....	\$10.00
Rear axle mounts .....	\$ 5.00 (for two)
Rear wheel .....	\$ 8.00 (each)
Rear wheel hardware .....	No charge
Basket .....	\$16.00
Right arm bar* (seen from front)	\$13.00
Left arm bar* (seen from front)	\$13.00
Removable cloth pad* .....	\$16.00

\* On certain models only.

\*\* Prices subject to change without notice.

### IF YOU NEED HELP

If you have any questions or if you need any part not listed, please call toll-free:

**1-800-345-4109**

or visit our Internet website, [www.gracobaby.com](http://www.gracobaby.com).

Return the form below with payment to:  
**GRACO CHILDREN'S PRODUCTS INC.**  
**CUSTOMER SERVICE DEPARTMENT**  
**P.O. BOX 100, MAIN STREET**  
**ELVERSON, PA 19520**

<b>Model No. (required)</b>	<b>SHIP TO:</b>
<b>Serial No. (required)</b>	Name
<input type="checkbox"/> Seat	Address
<input type="checkbox"/> Canopy	City, State, Zip
<input type="checkbox"/> Front swivel assembly	( )
<input type="checkbox"/> Rear axle	Telephone
<input type="checkbox"/> Rear axle mounts	
<input type="checkbox"/> Rear wheel	<input type="checkbox"/> Check enclosed
<input type="checkbox"/> Basket	(payable to Graco Children's Products Inc.)
<input type="checkbox"/> Right arm bar	<input type="checkbox"/> Charge to credit card:
<input type="checkbox"/> Left arm bar	<input type="checkbox"/> Visa
<input type="checkbox"/> Removable cloth pad	<input type="checkbox"/> MasterCard
	<input type="checkbox"/> Discover
Subtotal: _____	Account #:
Shipping & handling*: <b>\$5.00</b>	Expiration date: _____
6% sales tax (PA only): _____	Signature: _____
Total: _____	
* \$15.00 outside the continental U.S.	